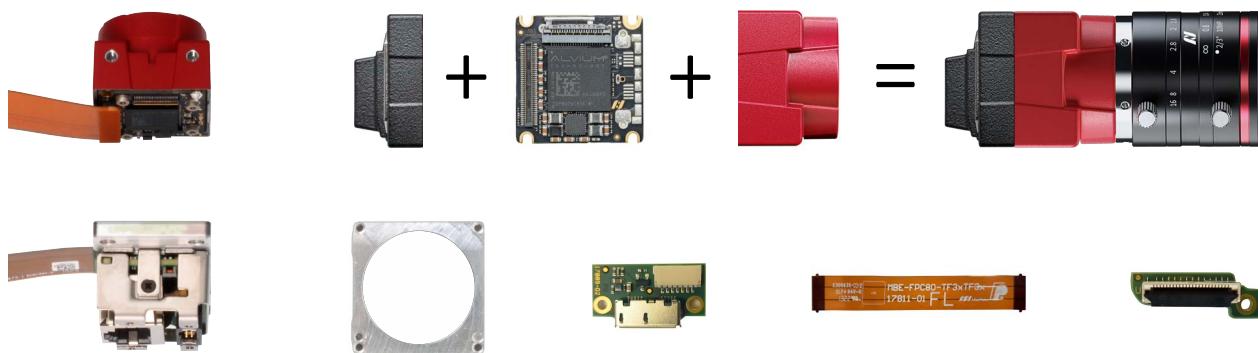


**APPLICATION NOTE****Assembling Alvium Cameras from  
CAD Components**

All interfaces and modular options

**V3.0.0  
2026-Feb-09**


## Scope

Learn to assemble from CAD (STEP) components:

- Various hardware options for housed standard Alvium cameras (all offered interfaces)
- Alvium modular options.

## STEP file components for housed Alvium cameras

For bare board cameras, you only need the bare board STEP file. Housed cameras are assembled from bare board cameras and housing components. The following components are used for housed standard Alvium USB cameras. STEP files for other housed Alvium cameras are combined from similar components.

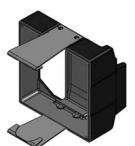	Bare board cameras	USB bare board cameras divide into USB 180° (standard) and USB 90°. For other interfaces, CSI-2 bare board files are used.
	Front housings	C-Mount, CS-Mount, or S-Mount are available. Because lens mounts cause vignetting with some large sensors, by default, only C-Mount or C-Mount and CS-Mount are offered for these sensors. Other lens mounts are available on request.
	Back housings	Back housings divide into 180° (standard) and USB 90°. For the other interfaces, only one version exists.

## Downloading STEP files



### Bare board file versions (from 2023-Aug-17)

Files for Alvium bare board cameras have been updated to the new hardware design according to the product change notification: [www.alliedvision.com/fileadmin/content/documents/tqm/PCN/PCN\\_2023-03-27\\_Alvium-CSI-2\\_USB\\_Mainboard-Version-Update.pdf](http://www.alliedvision.com/fileadmin/content/documents/tqm/PCN/PCN_2023-03-27_Alvium-CSI-2_USB_Mainboard-Version-Update.pdf).

If you need STEP data for the previous hardware design, please visit [www.alliedvision.com/en/about-us/contact-us/technical-support-repair-/rma/](http://www.alliedvision.com/en/about-us/contact-us/technical-support-repair-/rma/) to contact our technical support team.

## Downloading STEP files for Alvium

You can find STEP file downloads for Alvium at [www.alliedvision.com/en/support/alvium-step-file-downloads](http://www.alliedvision.com/en/support/alvium-step-file-downloads):

- Standard Alvium models, including CSI-2, G1, G5, and USB
- Alvium modular options, such as Alvium Flex, Alvium G1 BL (Board Level), and Alvium Frame
- Accessories, including Alvium Flex accessories, tripod adapter, heat sinks, and IP housings.


This is an example for Alvium Flex 040 Bare Board.

1. Go to the download page: [www.alliedvision.com/en/support/alvium-step-file-downloads](http://www.alliedvision.com/en/support/alvium-step-file-downloads).



The screenshot shows the Allied Vision website with the following details:

- Header:** Includes the Allied Vision logo, a search bar, and navigation links for Language, Bookmarks, and Contact Sales.
- Page Navigation:** Shows a breadcrumb trail: Support // Camera Documentation // Area Scan Cameras documentation // Alvium Step File Downloads.
- Content:** Features a section titled "3D CAD files" with the sub-section "(STEP) file downloads for Alvium". Below this, a text box states: "Here you can download STEP files for Alvium cameras." There are also several small 3D CAD model images of Alvium components.

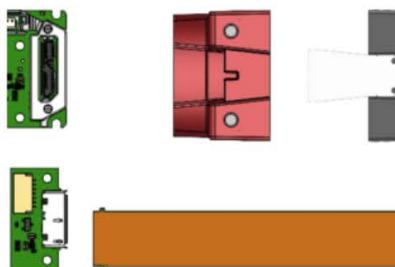

## 3D CAD files

### (STEP) file downloads for Alvium

Here you can download STEP files for Alvium cameras.

2. Scroll down and open the corresponding accordion.
3. Click the download link under **040 (IMX287)**:

## Bare Board Cameras

// Standard Alvium CSI-2 bare board cameras



// Standard Alvium USB 90° bare board cameras



// Standard Alvium USB 180° bare board cameras



// Alvium Flex bare board cameras



STEP files are common for CSI-2 and USB.

- 030 VSWIR (IMX991)  
[Alvium Flex Bare Board IMX990 991 VSWIR](#)
- 040 (IMX287)  
[Alvium Flex Bare Board IMX273 287 296 297](#)



### Bare board files

- Standard Alvium USB: Alvium USB bare board files
- Standard Alvium CSI-2, G1, FP3, G5/G5X, GM2: Alvium CSI-2\* bare board files
- Alvium Flex, G1 BL (Board Level): Alvium Flex bare board files

\* The interface may be different for real cameras, of course.




### Front housing type


Housed Alvium monochrome and color cameras use front housings with **small** or **large** filter window for C-Mount and CS-Mount. See [Filter size in front housings](#) on page 7 for the corresponding front housing type to match your sensor model.

## Assembling STEP files for housed Alvium cameras


The following instructions show a closed housed standard Alvium USB camera. But they apply to all housed Alvium cameras, including all interfaces and modular options.

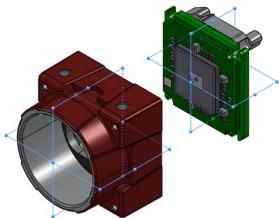


1. Set the vertical and horizontal planes congruent.

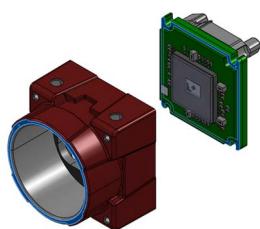


2. Set the distance between the mounting surface and the lens mount front flange. See [Mechanical Length by Alvium camera model](#) on page 8.

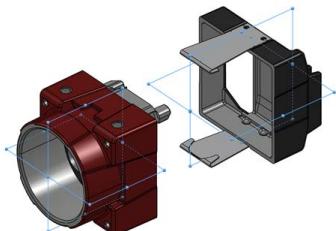

3. Set the vertical and horizontal planes congruent.

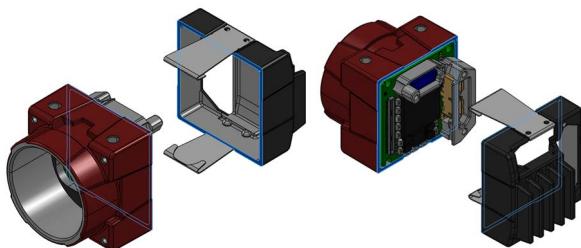


4. Set the blue marked surfaces congruent.

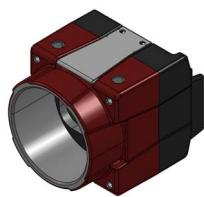


You are done!

## Assembling STEP files for Alvium Frame cameras

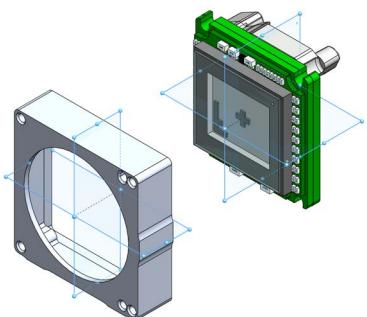


1. Set the vertical and horizontal planes congruent.


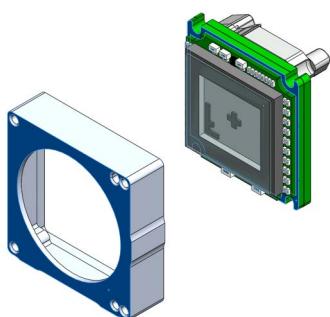


2. Adjust the distance between the front surface of the frame and the mounting surface of the bare board. See [Mechanical Length by Alvium camera model](#) on page 8.

You are done!

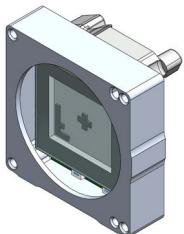

## Assembling STEP files for Alvium Flex applications

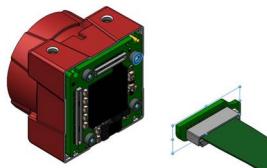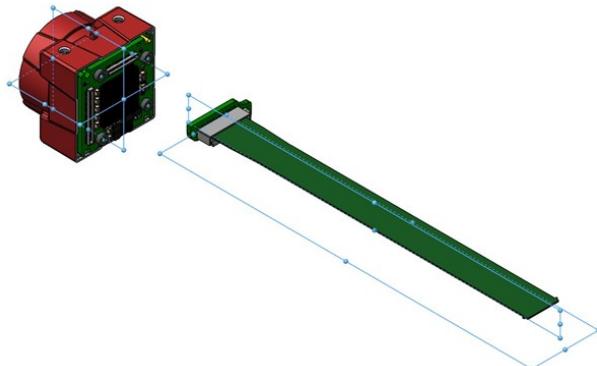

1. Set the vertical and horizontal planes congruent for the Add-on Board and for the camera.

2. Set the remaining plane of the Add-on Board congruent to the surface of the threaded sleeves at the camera back panel.


3. Apply correspondingly to join FPC cables with Add-on Boards, Interface Boards, Adapter Boards and embedded boards.

You are done!


## Assembling STEP files for Alvium G1 BL STEP applications

STEP files for Alvium G1 BL cameras are assembled from Alvium Flex bare board cameras, (front housings for sensor units with lens mount), and interface units with FPC cables. Please transfer the instructions shown for [Assembling STEP files for Alvium Flex applications](#) above.

Sensor unit: C-Mount

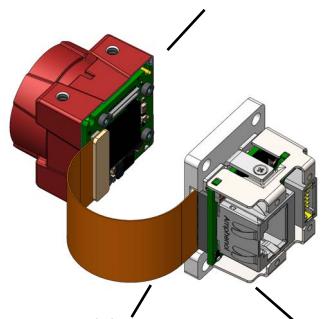


Sensor unit: No Mount

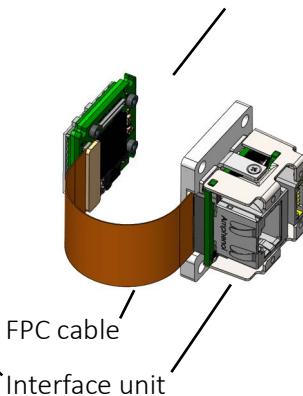

FPC cable

FPC cable

Interface unit

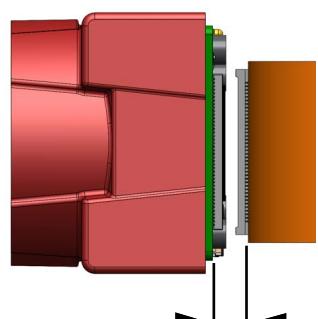

4 mm  
(gap after connecting)

## Specifications for Alvium STEP files



### Model availability

Some models in the following tables are not available for every camera interface. Please see the corresponding Alvium User Guide for availability.

## Filter size in front housings

Housed Alvium monochrome and color cameras use front housings with **small** or **large** filter window for C-Mount and CS-Mount. The size of the filter window depends on the size of the sensor model. For S-Mount, no filter is available. Therefore, a common front housing is used for S-Mount.

Table 1 shows the front housing type for housed Alvium color and monochrome models.



### Availability of lens mounts

In general, all sensor models are available with C-Mount, CS-Mount, and S-Mount. To avoid vignetting, we do not offer large sensor models with S-Mount (or CS-Mount) by default where the lens mount does not match the size of the sensor. S-Mount (and CS-Mount) are available on demand for these sensor models.

Alvium model	Lens mount			Alvium model	Lens mount		
	C	CS	S		C	CS	S
030 VSWIR	Small	Small	Default	500m/c	Small	Small	Default
040m/c	Small	Small	Default	501m/c NIR	Small	Small	Default
050m/c	Small	Small	Default	507m/c (Pol)	Large	Large	<i>Default</i>
052m/c	Large	Large	<i>Default</i>	508m/c (Pol)	Large	Large	<i>Default</i>
120m/c	Small	Small	Default	510m/c	Large	Large	Default
130 VSWIR	Small	Small	Default	511m/c	Large	Large	Default
131m/c	Large	Large	Default	530 VSWIR	Large	Large	<i>Default</i>
158m/c	Small	Small	Default	811m/c	Large	Large	<i>Default</i>
192m/c	Large	Large	Default	812 UV	Large	Large	<i>Default</i>
203m/c	Large	Large	Default	895m/c	Large	Large	<i>Default</i>
210m/c	Small	Small	Default	1236m/c	Large	<i>Large</i>	<i>Default</i>
234m/c	Large	Large	<i>Default</i>	1240m/c	Large	Large	Default
235m/c	Large	Large	<i>Default</i>	1242m/c	Large	Large	<i>Default</i>
240m/c	Small	Small	Default	1620m/c	Large	Large	<i>Default</i>
291m/c	Large	Large	<i>Default</i>	2040m/c	Large	Large	<i>Default</i>
319m/c	Large	Large	Default	2050m/c	Large	Large	<i>Default</i>
320 VSWIR	Large	Large	<i>Default</i>	2460m/c	Large	Large	<i>Default</i>

Mount options in *italics* are available on demand. | (Pol): Including Pol models

Table 1: Filter window type of front housings by lens mount

## Mechanical Length by Alvium camera model

Mechanical Length (ML) defines the sensor position along the z-axis. This value is common for Alvium cameras using the same sensor model, independent of the camera interface. Not all sensors are available for all interfaces.



### Values for Mechanical Length

#### Standard Alvium, Alvium Flex, and Alvium G1 BL cameras

Mechanical length (ML) defines the mechanical distance from the mounting area of the sensor to the lens mount front flange, without optical filter.

The values for Mechanical length (ML) in [Table 2](#) apply to C-Mount. For CS-Mount and S-Mount, values calculate [C-Mount value] – 5 mm.

#### Alvium Frame cameras

Mechanical length Frame (ML-Frame) defines the mechanical distance from the mounting area of the sensor to the front surface of the frame.

Values calculate [Mechanical Length (ML)] – 13.9 mm

Alvium model	ML: Mechanical length
030 VSWIR	19.613 mm
040m/c	19.879 mm
050m/c	19.604 mm
052m/c	19.713 mm
120m/c	19.689 mm
130 VSWIR	19.613 mm
131m/c	19.845 mm
158m/c	19.879 mm
192m/c	19.845 mm
203m/c	19.713 mm
210m/c	19.739 mm
234m/c	19.713 mm
235m/c	19.713 mm
240m/c	19.929 mm
291m/c	19.713 mm
319m/c	19.929 mm
320 VSWIR	19.713 mm

Alvium model	ML: Mechanical length
500m/c	19.739 mm
501m/c NIR	19.739 mm
507m/c (Pol)	19.929 mm
508m/c (Pol)	19.929 mm
510m/c	19.713 mm
511m/c	19.613 mm
530 VSWIR	19.713 mm
811m/c	19.613 mm
812 UV	19.610 mm
895m/c	19.826mm
1236m/c	19.829 mm
1240m/c	19.763 mm
1242m/c	19.613 mm
1620m/c	19.613 mm
2040m/c	19.613 mm
2050m/c	19.663 mm
2460m/c	19.613 mm

(Pol): Including Pol models

*Table 2: Mechanical Length by Alvium camera model*

## Contact us

Website, email

### General

[www.alliedvision.com/en/contact](http://www.alliedvision.com/en/contact)

[info@alliedvision.com](mailto:info@alliedvision.com)

### Distribution partners

[www.alliedvision.com/en/avt-locations/avt-distributors](http://www.alliedvision.com/en/avt-locations/avt-distributors)

### Support

[www.alliedvision.com/en/support](http://www.alliedvision.com/en/support)

[www.alliedvision.com/en/about-us/contact-us/technical-support-repair-/rma](http://www.alliedvision.com/en/about-us/contact-us/technical-support-repair-/rma)

## Offices

### Europe, Middle East, and Africa (Headquarters)

Allied Vision Technologies GmbH

Taschenweg 2a

07646 Stadtdroda, Germany

T// +49 36428 677-0 (Reception)

T// +49 36428 677-230 (Sales)

F// +49 36428 677-28

### North, Central, and South America, Canada

Allied Vision Technologies Canada Inc.

300 – 4621 Canada Way

Burnaby, BC V5G 4X8, Canada

T// +1 604 875 8855

### USA

Allied Vision Technologies, Inc.

102 Pickering Way- Suite 502

Exton, PA 19341, USA

Toll-free// +1-877-USA-1394

T// +1 978 225 2030

### Asia-Pacific

#### China

Allied Vision Technologies Shanghai Co Ltd.

B-510, Venture International Business Park

2679 Hechuan Road

Minhang District, Shanghai 201103

People's Republic of China

T// +86 21 64861133

#### Japan

Allied Vision Technologies

Yokohama Portside Bldg. 10F

8-1 Sakae-cho, Kanagawa-ku

Yokohama-shi, Kanagawa, 221-0052

T// +81 (0) 45 577 9527

#### Singapore

Allied Vision Technologies Asia Pte. Ltd

82 Playfair Rd, #07-01 D'Lithium

Singapore 368001

T// +65 6634 9027

## Liability, trademarks, and copyright

Allied Vision has tested the product under the described conditions. The customer assumes all risk of product damage, application compromise or potential failure, and Sales Warranty loss related to deviation from the described conditions. Allied Vision's acknowledgement of such deviations in the customer's modified product or applications does not constitute advice for use. No Warranty is offered or implied by Allied Vision regarding the customer's assumed risk or legal responsibilities with such modified products or applications.

All text, pictures, and graphics are protected by copyright and other laws protecting intellectual property. All content is subject to change without notice. All trademarks, logos, and brands cited in this document are property and/or copyright material of their respective owners. Use of these trademarks, logos, and brands does not imply endorsement.

Copyright © 2026 Allied Vision Technologies GmbH. All rights reserved.